



bulcan



INSTALATION GUIDE



Compatibility

Bulcan version 1.0 is specifically designed for all Bosch motors prior to Smart System, valid for Gen2, Gen3, Gen4.

Your ebike

Given the wide variety of frames that are currently available with a Bosch motor installed, it is the customer's responsibility to have the instructions for their ebike to be able to access the connectors for installing Bulcan on the motor.

Installation

To install Bulcan you must have the ebike turned off and it is recommended to remove the battery if it is removable.

STEP 1

Motor cover removal.


Unscrew the screws holding the engine cover, remove the motor cover.
On some ebikes it is necessary to remove the crank.



STEP 2

Disconnection of the display.

Disconnect the motor display/control connector.

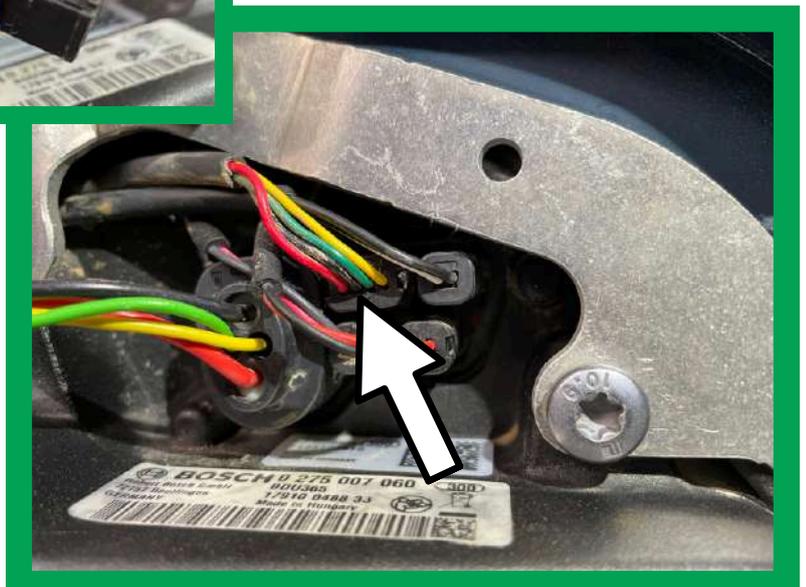

STEP 3



Bulcan connection.


Replace the original connector with the bulcan connector



STEP 4

Bulcan connection 2.

Plug the ebike connector disconnected from the motor into the Bulcan connector.

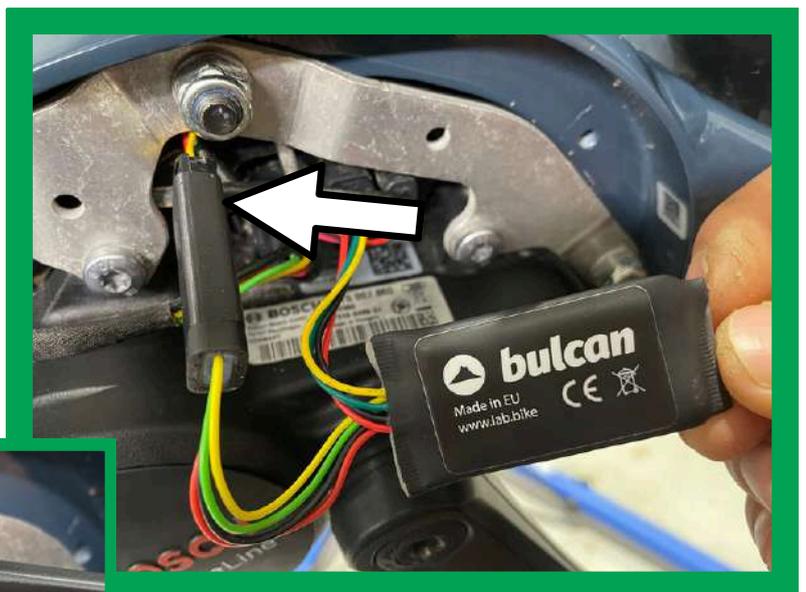

STEP 5

Motor cover assembly.

- 1-Fit the Bulcan and all connectors and wires into the free space in the motor.
- 2-Place the motor cover to its original position and tighten the original screws.



Your Bulcan is installed, go to the users manual to pair Bulcan with your device.